


BED MONTE - ASSEMBLY INSTRUCTION

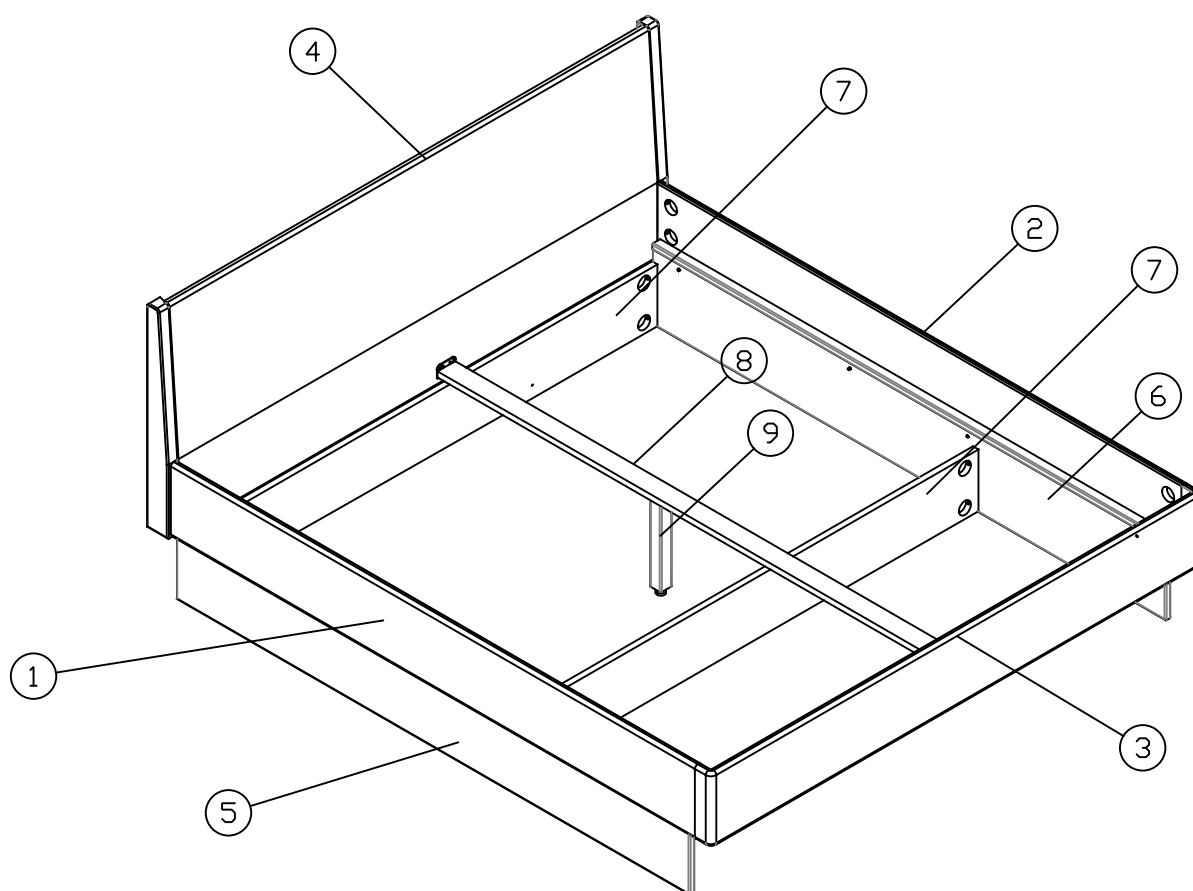

40 Minutes



M6x45



Ax16

Ø10x40



Bx16



Cx16

M6x30



Dx8

SW 4



SW 5



3,5x16



Ex14




Fx2



Gx2




1.

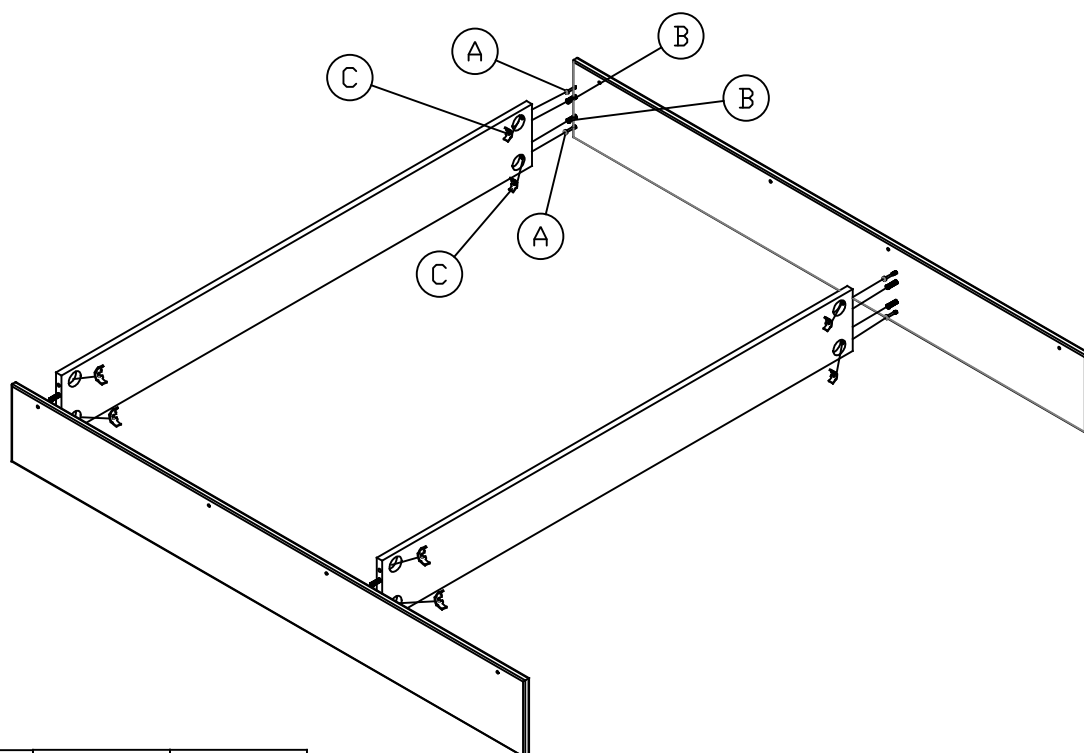

M6x45	Ø10x40		SW 5
			
Ax8	Bx8	Cx8	




2.

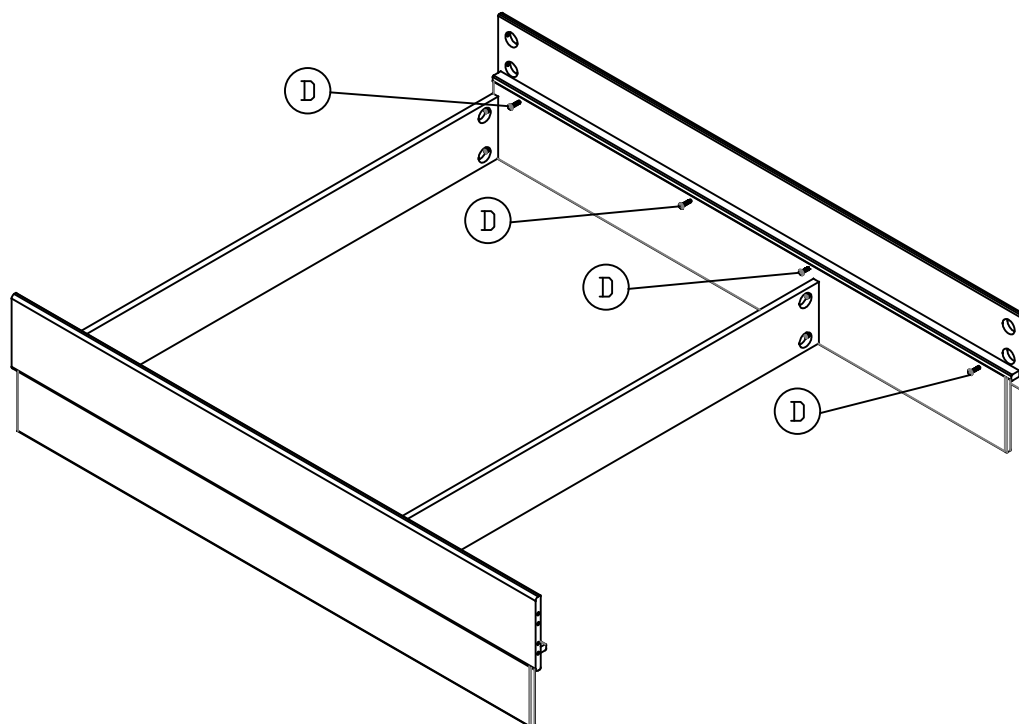

M6x30	SW 4
	
Dx8	

3.

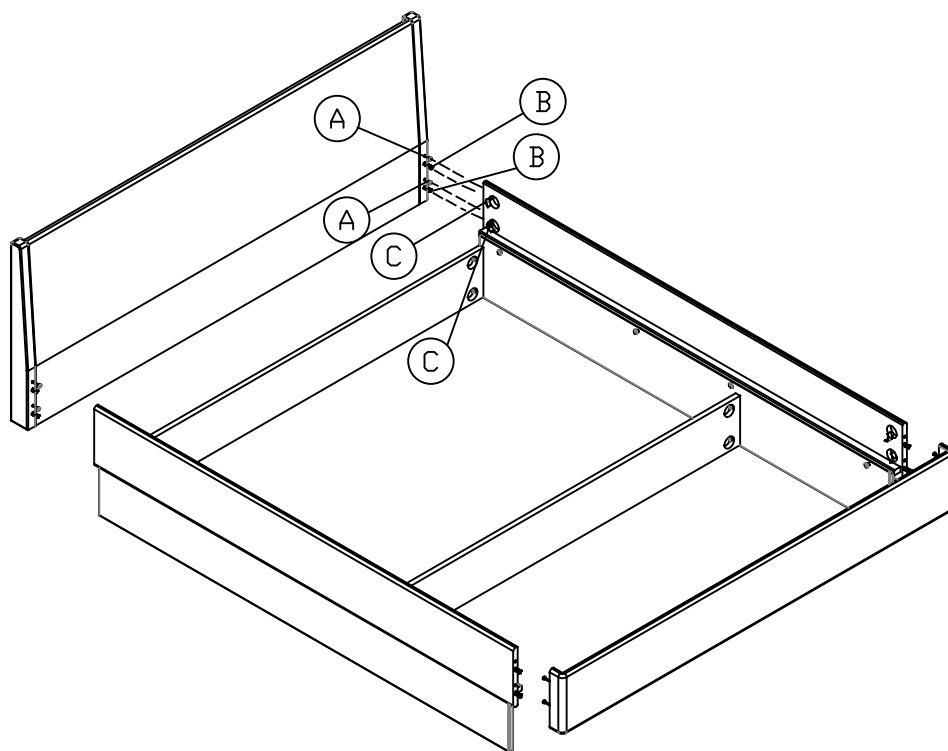

M6x45

Ø10x45

SW 5





A×8

B×8

C×8

4.

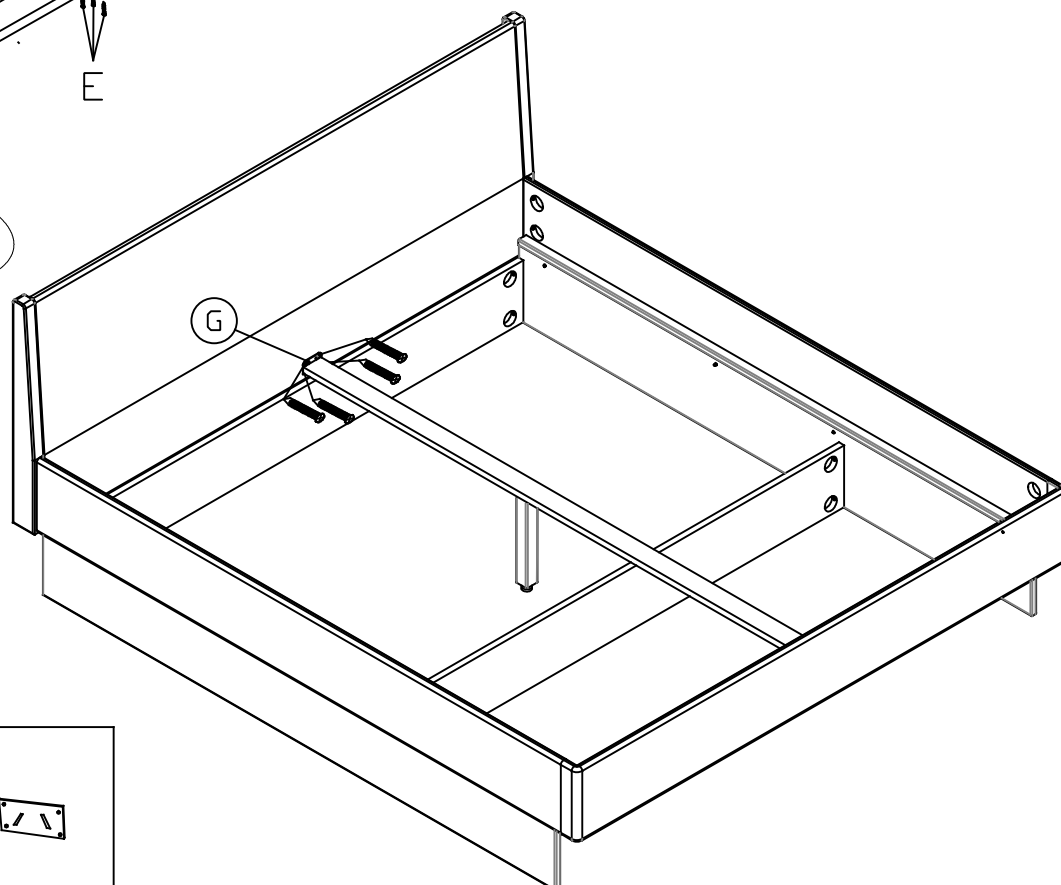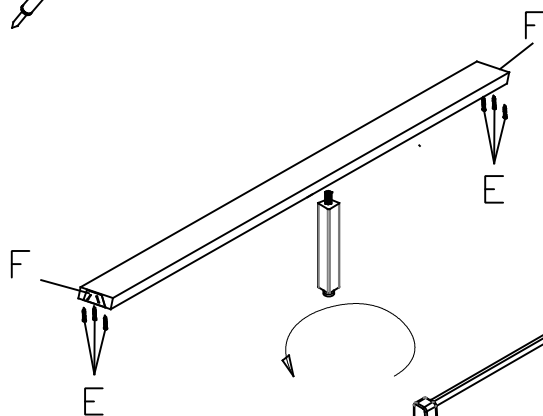

3,5x16

x1

G×2



E×14

F×2

x1

G×2