



GRACE CHAIR




Trudeau
Collection

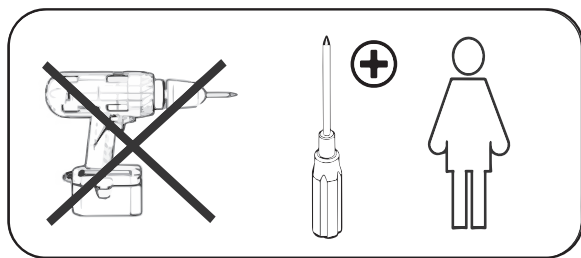


Ax1

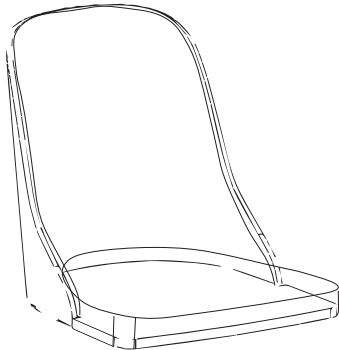


Ax1

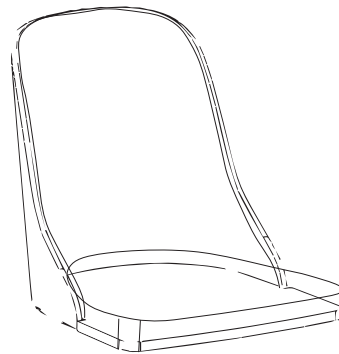


Bx1

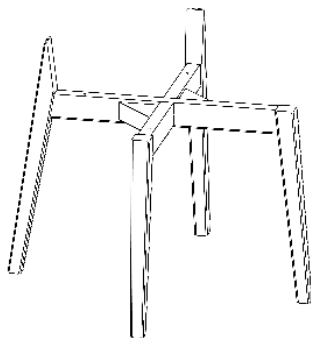

Bx1

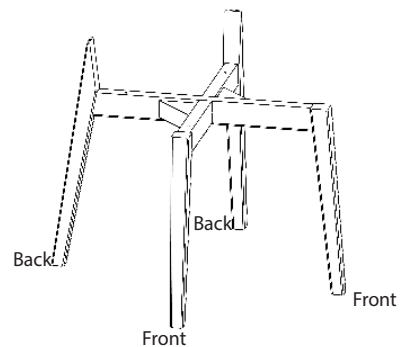

Cx4

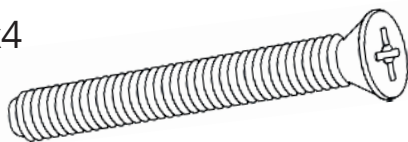


M6x45




Attention!

It might be necessary to re-tighten all screws on the chair on a regular basis, depending on the level of use and the room climate.

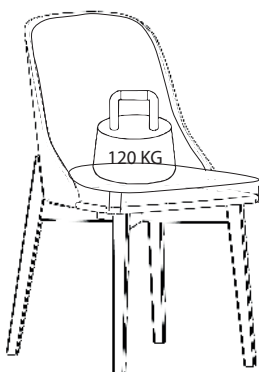

Ax1

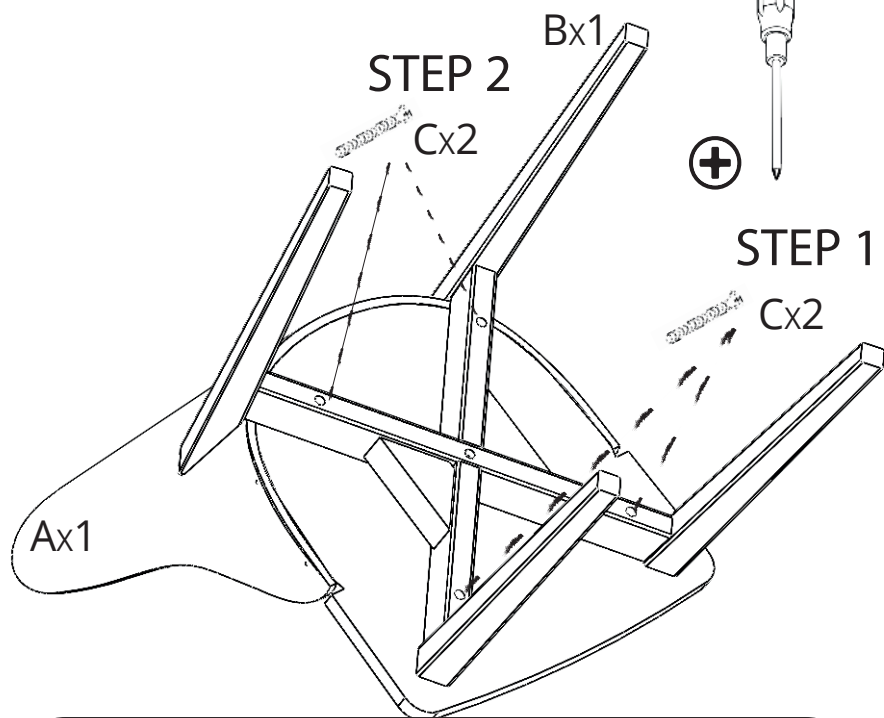

STEP 1

Loosely install the front screws M6x45 (2 pcs.) on both sides. Lightly tighten the screws without fully securing them to allow proper alignment.

STEP 2

Once the frame and backrest are correctly aligned and tightly fitted, install and tighten the rear screws M6x45 (2 pcs.) in the cross brace.

Finally, fully tighten all screws